

INSTALLATION MANUAL AIR CONDITIONER

Please read this installation manual completely before installing the product. Installation work must be performed in accordance with the national wiring standards by authorized personnel only. Please retain this installation manual for future reference after reading it thoroughly.

THERMAV™ DHW Tank
PHLTA, PHLTC



MFL62047301
Rev.06_052220

www.lg.com
Copyright © 2012 - 2020 LG Electronics Inc. All Rights Reserved.

Safety Precautions

Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed. ■ Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.

⚠ WARNING This symbol indicates the possibility of death or serious injury.

⚠ CAUTION This symbol indicates the possibility of injury or damage.

⚠ WARNING

■ Installation

ELB(Earth Leakage Circuit Breaker) should be installed for safety.

Entrust installation of the product to the service center because improper installation may cause fire, an electric shock, explosion, and physical injury.

Use the original parts in order to prevent fire, an electric shock, explosion, and product breakdown.

Keep combustible and/or inflammable materials away from the product in order to prevent fire or product breakdown.

Do not disassemble, repair, or modify the product at your discretion in order to prevent fire or an electric shock.

Do not install the product in wet and humid areas in order to prevent product breakdown.


Do not drop water on to the product. It may cause an electric shock or product breakdown.

If the product was submerged under water, ask the service center for instruction. It may cause fire or an electric shock unless you do that.

For electrical work, contact the dealer, seller, a qualified electrician, or Authorized Service Center.


Installation Method

Model	R410A Split		R32 Split	
Production Date	Until Sep. 30, 2019	From Oct. 1, 2019	Until Feb. 28, 2020	From Mar. 2, 2020

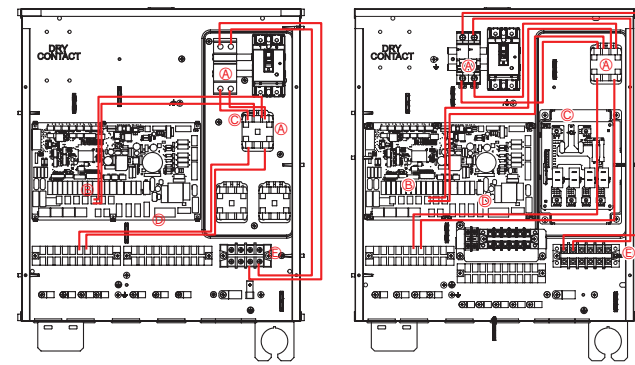


With magnet switch
1Ø Electric Heater Model
(3 Series)

With heater PCB
1Ø Electric Heater Model
(3 Series)

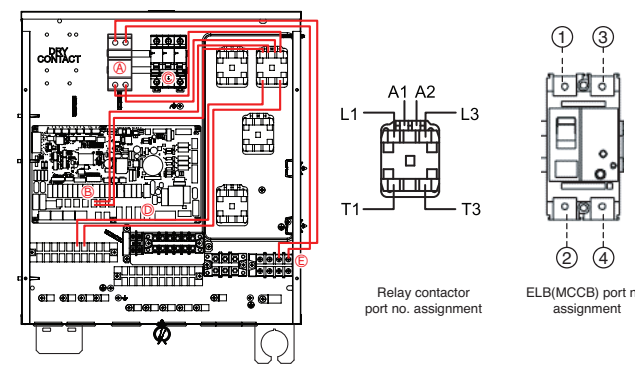

3Ø Electric Heater Model
(3 Series)

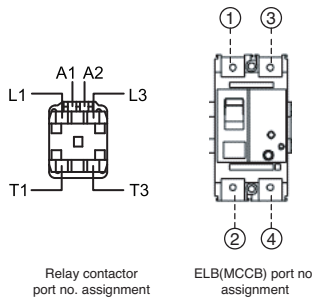

Safety Precautions

⚠ CAUTION

Make sure children or senior citizens use the product under proper observation in order to prevent safety accident.


Do not subject the product to shock. It will cause product breakdown.

Do not pick the product with a sharp tool. It may cause product breakdown with the damage to its parts.

Do not clean the product with strong cleanser such as solvent. Use soft clothes in order to prevent fire or product deformation.

Do not touch the product with a wet hand. Do not pull the lead cable. It may cause product breakdown or an electric shock.

Part Description

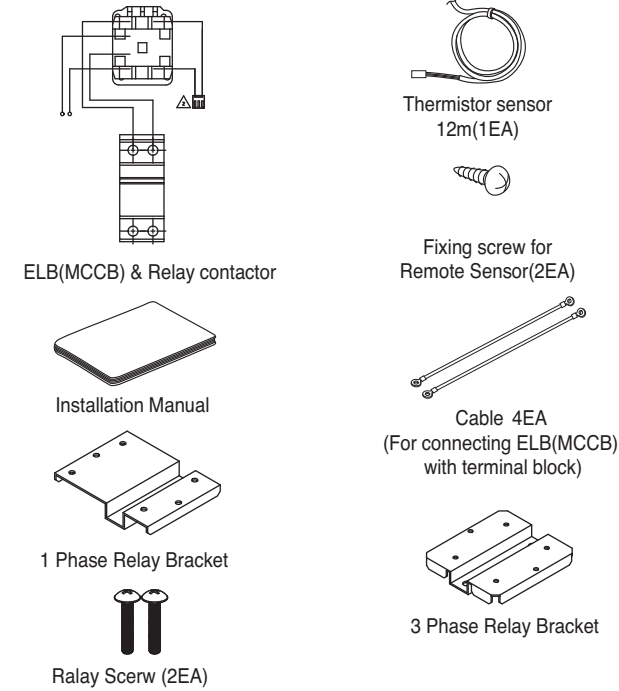


Installation Method

Step 6. Find DHW tank sensor. Connect it to 'CN_TH4' (Red Connector) of the indoor unit PCB (symbol Ⓐ at the picture). The sensor wire should be passed through holes for sensor (symbol Ⓑ and Ⓒ at the picture). The sensor should be mounted correctly to the sensor hole of DHW tank.

⚠ CAUTION

Sensor mounting
Insert sensor into sensor socket and bolt it tightly.
• 1Ø Electric Heater Model and 3Ø Electric Heater Model are mounted by same method as below.

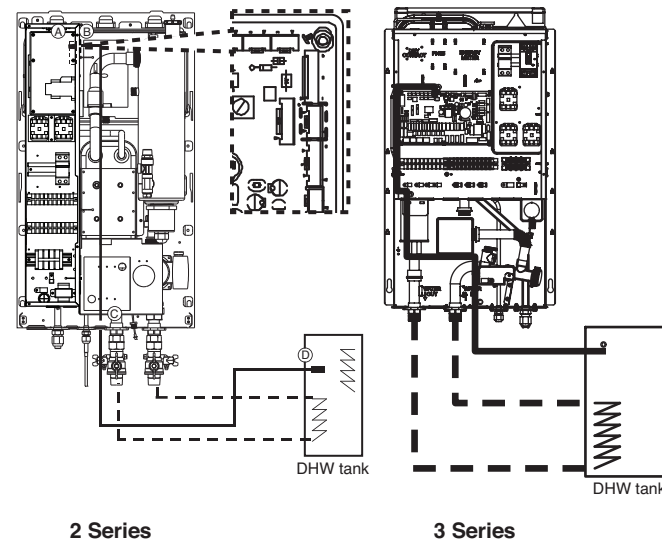

2 Series

3 Series

Installation Method

Installation Method

How to Install Sanitary Water Tank Kit or DHW Tank Kit

Follow below procedures Spet 1 - Step 6
Step 1. Find magnetic switch and ELB(MCCB) in the kit. Fit them into the indoor unit control box with enclosed a bracket and screws.(symbol Ⓐ at picture)
Step 2. Contact 'CN_B/HEAT(A)'(white connector)of the indoor unit PCB with magnetic switch contact using enclosed cable(symbol Ⓑ at the picture). Connect magnetic switch contactor port no. A1 and A2.
Step 3. Connect magnetic switch contactor port no.L1 and L3 with ELB(MCCB) port no. 2 and 4(symbol Ⓒ at the picture).

⚠ CAUTION

Check Poarity
• Connect magnetic switch contact port no. L1 to ELB(MCCB) port no.2
• Connect magnetic switch contact port no. L3 to ELB(MCCB) port no.4

Step 4. Connect magnetic switch contactor port no. T1 and T3 with terminal block 1 port 6 and 7(symbol Ⓓ at the picture).

Check Polarity
• Connect magnetic switch contact port no. T1 to terminal block 1 port 6
• Connect magnetic switch contact port no. T3 to terminal block 1 port 7

Step 5. Connect ELB(MCCB) to Terminal Block.

1Ø Electric Heater Model
→ Connect ELB(MCCB) port no.1 and 3 with terminal block 3 port 3 and 4(symbol Ⓔ at the picture).

3Ø Electric Heater Model
→ Connect ELB(MCCB) port no.1 and 3 with terminal block 3 port 1 and 2(symbol Ⓕ at the picture).

Check Polarity
1Ø Electric Heater Model
• Connect ELB(MCCB) port no. 1 to terminal block 3 port 3
• Connect ELB(MCCB) port no. 3 to terminal block 3 port 4
3Ø Electric Heater Model
• Connect ELB(MCCB) port no. 1 to terminal block 3 port 1
• Connect ELB(MCCB) port no. 3 to terminal block 3 port 2